


Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&  
Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&Olufsen Bang&

**BEOGRAM**  
**RX**

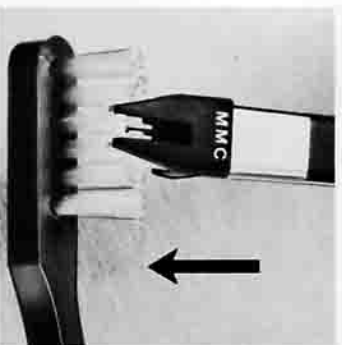

**Cleaning records and stylus.**  
They may contain solvents which can damage parts of the cartridge.

#### Replacing the cartridge

Hold the tonearm firmly with one hand, while carefully moving the cartridge from side to side and pulling outwards with the other.

#### Metal surfaces

The chassis and turntable can usually be kept clean with a dry cloth.

Be careful with the stylus. Lower the stylus guard before wiping the metal surfaces or moving the record player.

Grease stains can be removed with a lukewarm detergent solution on a soft cloth. Wipe dry with a clean cloth.

#### Dust cover


We recommend Ajax Window Cleaner or its equivalent for cleaning the transparent dust cover. Do not use spirits.

#### Cleaning the stylus

Sound distortion may be due to dust on the stylus. Use the cleaning brush supplied, brushing only in the direction indicated by the arrow so as to avoid damaging the cantilever.

**Beware of chemical fluids for**

TECHNICAL SPECIFICATIONS	BEOGRAM RX
Type No.	5773
Wow and flutter, DIN	<±0.09%
Wow and flutter, WRMS	<±0.045%
Rumble DIN weighted	>62 dB
Rumble DIN unweighted	>42 dB
Speeds	33-45 rpm.
Speed deviation	<±0.2%
Power supply	120 (90-130) volts
Power frequency	50-60 Hz
Power consumption	8 watts
Dimensions W x H x D	17½ x 3½ x 13 in.
Weight	13.2 lbs.
<b>Subject to change without notice</b>	

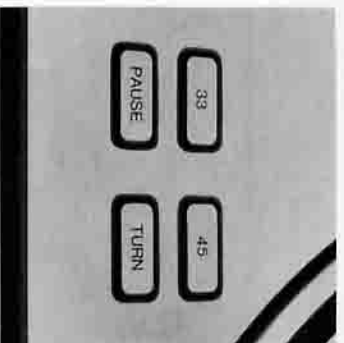

## OPERATING

30 cm records: press 33.  
17 cm records: press 45.  
25 cm records: move the pickup in to the start groove and press 33.

## Pause

### Press PAUSE:

You can resume play from the same place by pressing 33 or 45. You can also move the pickup to another place on the record before pressing 33 or 45.

## Stop

Press PAUSE and move the arm out to its rest position.



## Centre adaptor

Fits records with large centre holes and is pressed down automatically with normal records.

## Special 17 cm records, 33 rpm:

Move the pickup in to the start groove and press 33.

## Checking and adjusting the counterweight



Usually, the counterweight scale is adjusted to indicate the correct stylus pressure value. If you want to check the scale, e.g. when replacing the pickup, do as follows:

- Press the stylus guard down
- Turn the counterweight through 1 - 0.5 - 0 to 1.5. Then turn anticlockwise until the tonearm is in equilibrium, i.e. until it «floats».



- If the  
hol  
con  
har  
you  
up  
turn  
clo  
sty  
gra  
● Flip  
Wipin  
Press  
voive  
movin  
There  
static  
under  
provi  
tact.




	<b>CAUTION</b> <small>RISK OF ELECTRIC SHOCK DO NOT OPEN</small>	
<p><b>CAUTION:</b> To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p>		

**WARNING:** To prevent fire or electric shock, do not expose this appliance to rain or moisture.

This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

**Setting up**  
Great care has been taken to protect the record player against damage during transportation. After unpacking, do as follows:

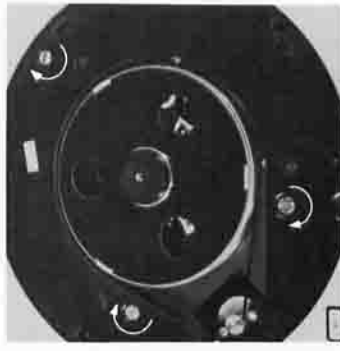

**Assembly after transport**  
Turn the three transport screws clockwise as far as they will go. Lay the platter on the turntable. If you ever want to remove the platter, lift the record spindle and then insert your fingers under the rim of the platter. Keep the packing for any subsequent transport.

**Space requirements**  
The Beogram RX can be placed in a shelving unit. You will need 42 cm clearance to open the dust cover fully. The depth requirement is 33 cm and the width 44 cm.

**Connecting to radio or amplifier**  
The Beogram RX has a cable fitted with two phono plugs: L for left channel, R for right channel. Connect the separate lead to the earth screw on the amplifier.

**Power connection**  
The Beogram is designed for operation on 120 volts, 60 Hz. It will operate on voltages between 90 and 130 volts.

**Mounting the pickup**  
An MMC cartridge – MMC 1 to MMC 5 – can be mounted directly on the tonearm fitting. Flip up the stylus guard.

**Stylus pressure**  
Adjust the arm to the recommended stylus pressure by turning the counterweight.



If you wish to adjust the arm to another value, you get maximum precision by first tuning the counterweight down to 0,5 gram and then up to the value you want.

**International guarantee**  
This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. It is a national guarantee, extended by Bang & Olufsen in the country in which the product was bought. The terms of the guarantee apply principally to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries.